



Μηδενισμός Μετρητή Διάρκειας Λάμπας-HARDWARE RESET

Πολλοί projectors απαιτούν από τον χρήστη τον μηδενισμό του μετρητή διάρκειας λάμπας για την ενεργοποίηση της καινούργιας, μετά την ολοκλήρωση της αντικατάστασης. Αυτά που αναγράφονται στη συνέχεια, είναι κάποιες κατευθυντήριες οδηγίες πως αυτό μπορεί να γίνει, σε επώνυμους projectors και αφορούν το λεγόμενο cold reset, hardware rest, factory default κλπ.

3M

- Turn on the projector.
- Press the "RESET" button on the remote control for approximately 3 seconds until a dialog box is displayed.
- Select the "RESET" using the button.
- Your lamp counter will now be reset.

ASK

There are two common methods to reset the lamp counter on these projectors:

Method 1:

- Press the decrease volume button on the remote and then the increase volume button within 3 seconds.
- The LED light on the projector will turn green.
- Turn on the projector.

Method 2:

- Turn on the Projector.
- Open the standard menu using the remote.
- Then select "Setup" or "Service" depending on your projector model.
- Then select "Reset Lamp Timer"

BenQ

- Turn on the projector
- While the projector running, press the MENU button.
- Select "OPTION" on the menu using the 5/6 buttons, then press the ENTER button.
- Select the "LAMP TIME" using the 5/ 6 buttons, then press and hold the RESET button for 3 seconds.
- Select "RESET" using the 5 button.

Boxlight

- Turn on the projector.
- Press the "MENU" button and the on-screen menu will appear.
- Press 3/4 button to remove the red frame pointer to the Setting Menu Icon .
- Press the 6 button to move the red frame pointer to the Lamp Counter Reset item and then press SELECT button.
- The message "Reset Lamp Counter?" appears. Move the pointer to "" and then press

SELECT button.

- Another confirmation dialog box appears and select "" to reset the Lamp Replace Counter.

Canon

- Turn on the projector.
- Press the "MENU" button and the on-screen menu will appear.
- Press 3/4 button to remove the red frame pointer to the Setting Menu Icon .
- Press the 6 button to move the red frame pointer to the Lamp Counter Reset item and then press SELECT button.
- The message "Reset Lamp Counter?" appears. Move the pointer to "" and then press SELECT button.
- Another confirmation dialog box appears and select "" to reset the Lamp Replace Counter.

Christie

- Turn on the projector.
- Press the "MENU" button and the on-screen menu will appear.
- Press 3/4 button to remove the red frame pointer to the Setting Menu Icon .
- Press the 6 button to move the red frame pointer to the Lamp Counter Reset item and then press SELECT button.
- The message "Reset Lamp Counter?" appears. Move the pointer to "" and then press SELECT button.
- Another confirmation dialog box appears and select "" to reset the Lamp Replace Counter.

Dell

- Press "MENU" on the remote or control panel to open the on screen display menu.
- Use the 3/4 keys and the section called "Lamp Setting"
- Use the 5/6 keys to select "Lamp Reset"
- Select "YES"

Dukane

- Turn on the projector.
- Press the "RESET" button on the remote control for approximately 3 seconds until a dialog box is displayed.
- Select the "RESET" using the button.
- Your lamp counter will now be reset.

Eiki

- Turn on the projector.
- Press the "MENU" button and the on-screen menu will appear.
- Press 3/4 button to remove the red frame pointer to the Setting Menu Icon .
- Press the 6 button to move the red frame pointer to the Lamp Counter Reset item and then press SELECT button.
- The message "Reset Lamp Counter?" appears. Move the pointer to "" and then press SELECT button.
- Another confirmation dialog box appears and select "" to reset the Lamp Replace Counter.

Elmo

- Turn on the projector.
- Press the "RESET" button on the remote control for approximately 3 seconds until a dialog box is displayed.
- Select the "RESET" using the button.
- Your lamp counter will now be reset.

Epson

All you need to do is

- Press and hold the "NUM" button on your Epson remote.
- Whilst holding down the "NUM" button, press the numbers "0000" (ie. Press zero 4 times)

Hitachi

- Turn on the projector.
- Press the "RESET" button on the remote control for approximately 3 seconds until a dialog box is displayed.
- Select the "RESET" using the button.
- Your lamp counter will now be reset.

HP

- Press "MENU" on the remote or control panel to open the on screen display menu.
- Use the 3/4 keys and the section called "Lamp Setting"
- Use the 5/6 keys to select "Lamp Reset"
- Select "YES"

Infocus

There are two common methods to reset the lamp counter on these projectors:

Method 1:

- Press the decrease volume button on the remote and then the increase volume button within 3 seconds.
- The LED light on the projector will turn green.
- Turn on the projector.

Method 2:

- Turn on the Projector.
- Open the standard menu using the remote.
- Then select "Setup" or "Service" depending on your projector model.
- Then **select "Reset Lamp Timer"**

Liesegang

- Turn on the projector.
- Press the "RESET" button on the remote control for approximately 3 seconds until a dialog box is displayed.
- Select the "RESET" using the button.
- Your lamp counter will now be reset.

NEC

- Press the "OFF" or "HELP" button on the remote control for a minimum of 10 seconds while in standby mode.

- When the lamp clock is reset to zero the status indicator light will go out.

Optoma

- Press "MENU" on the remote or control panel to open the on screen display menu.
- Use the 3/4 keys and the section called "Lamp Setting"
- Use the 5/6 keys to select "Lamp Reset"
- Select "YES"

Panasonic

- Press the "POWER" button until an image is projected onto the screen.
- Press the "MENU" button to display the main on screen menu and then press the F/G buttons to select "OPTION".
- Press the "ENTER" button to display the "OPTION" menu, and then press the 5/6 buttons to select "LAMP RUNTIME".
- Press and hold the "ENTER" button for approximately 3 seconds.
- The "LAMP RUNTIME" will change to "TIME RESET [POWER OFF]".
- The projector will then be powered down.

Panasonic (pt-m1e)

- Press the "POWER" button until an image is projected onto the screen.
- Press the "MENU" button to display the main on screen menu and then press the F/G buttons to select "OPTION".
- Press the "ENTER" button to display the "OPTION" menu, and then press the 5/6 buttons to select "LAMP RUNTIME /LIFE RUNTIME".
- Press and hold the "ENTER" button (REMOTE) for approximately 3 seconds.(panel will be show RED)
- The "LAMP RUNTIME" will change to "TIME RESET [POWER OFF]".
- The projector will then be powered down.

Proxima

There are two common methods to reset the lamp counter on these projectors:

Method 1:

- Press the decrease volume button on the remote and then the increase volume button within 3 seconds.
- The LED light on the projector will turn green.
- Turn on the projector.

Method 2:

- Turn on the Projector.
- Open the standard menu using the remote.
- Then select "Setup" or "Service" depending on your projector model.
- Then select "Reset Lamp Timer"

Sony

- Turn off the projector.(connect powercable, projector off)
- Press the "RESET" button on the remote control and then press channel Left and then press channel Right.
- Press Enter button.
- Turn on the projector

Toshiba

- Insert the power cord.
- While holding down "ON/STANDBY", "MENU" and "INPUT" simultaneously, turn on the main power switch.
- The lamp timer is reset automatically.
- Check that " 0H" appears on the lamp timer of the status display.
- NOTE : after resetting the lamp timer , turn off the projector using the "ON /STANBY" button,then turn off the main power switch.

Viewsonic

- Turn on the projector.
- Press the "RESET" button on the remote control for approximately 3 seconds until a dialog box is displayed.
- Select the "RESET" using the button.